


TARA operating notes for Kenwood TM-G707A

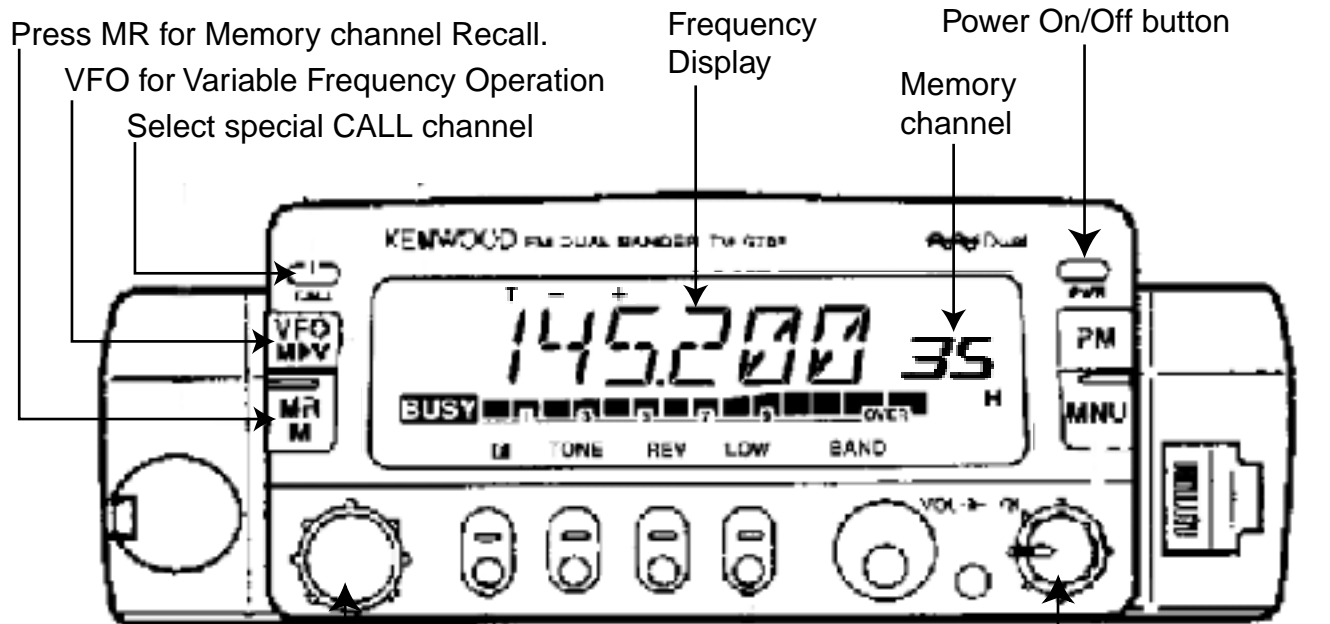

Use Tuning control knob (or microphone Down/Up buttons) to:

- > change channel in MR mode (Press center button to display frequency or alpha label.)
- > change frequency in VFO mode (Press center button for Mhz steps)
- > Select menu entries (See Kenwood manual for menu and programming information.)


Multi-function buttons
Follow LCD labels depending on selected mode

- > TONE selects CTCSS Off/On
- > F+T.SEL select CTCSS frequency
- > F+SHIFT set repeater offset
- > REVERSE switches transmit/receive frequencies
- > LOW selects Low, Med, High RF output power
- > BAND switches VHF/UHF
- > F button alters meaning of other controls.

To program memory channels:

- > Dial or Key in frequency in VFO mode. Select repeater offset, CTCSS mode, etc.
- > Press F. Memory channel number appears.
- > Dial in channel number desired (G = in use)
- > Press MR to store, or F to cancel.

Microphone lock switch on rear

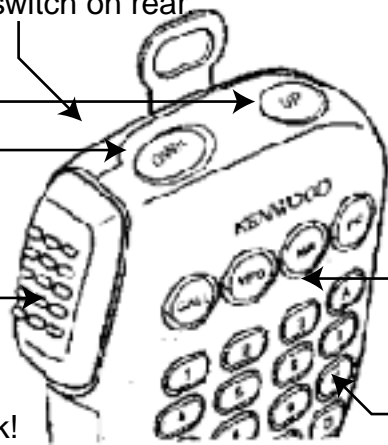

Push to Talk!
Release to Listen!

Do not transmit on High output power for extended periods. The transceiver may overheat and malfunction.