


MODEL 163.113 /128 /136 /154 /157 /172 /174 /175

- 1 Release button
- 2 Lock button
- 3 Unlock button
- 4 Unlock button of tailgate
- 5 Panic button (USA)

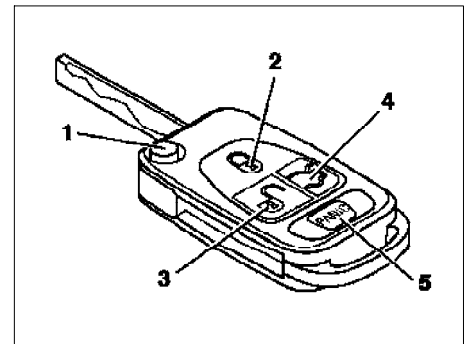


P80.30-0483-01

i	If it is not possible to lock or unlock the vehicle, a synchronization of the locking system can be necessary. The reading-in process must be carried out within 10 seconds.		
1	Insert remote control key into ignition switch and rotate in position 2		
2	Remove key and press lock button (2) and hold pressed, while simultaneously pressing the unlock button (3) five times.		
3	Release buttons and then press one of the two buttons once		

MODEL 163, 168, 414

- 1 Battery compartment cover
- 2 Batteries
- 3 Battery positive contact
- 4 Battery negative contact

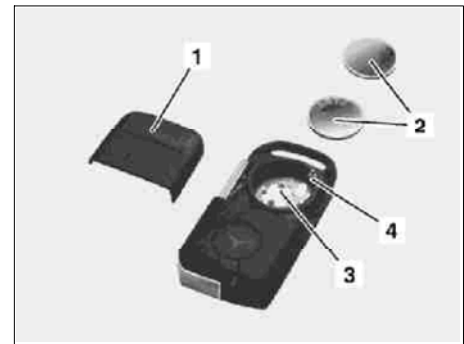

P80.35-0231-01

☒ ☒	Removing, installing		
1	Press off battery compartment cover (1)		
2	Remove batteries (2) and replace	<p>i Dispose of discharged batteries properly.</p> <p>i Installation: Observe polarity of batteries. Ensure that the battery contacts (3, 4) make proper contact with the battery.</p>	
3	Install in the reverse order		
4	Synchronize transmitter signal for radio remote control	Model 163 Models 168, 414	AR80.35-P-4215GH AR80.35-P-4215GC