

Description: **Billet Fork Caps**


Part Number: **990A0-75040**

Applications: **C50 / M50 / C90**

Installation Time: **.25 HRS**

## Contents

Ref.	Part Number	Description	QTY
1.		Billet Fork Cap	2
2.		M5-0.8x10mm Set Screw	2
5.	990A0-75040-001	Screw Replacement Kit	

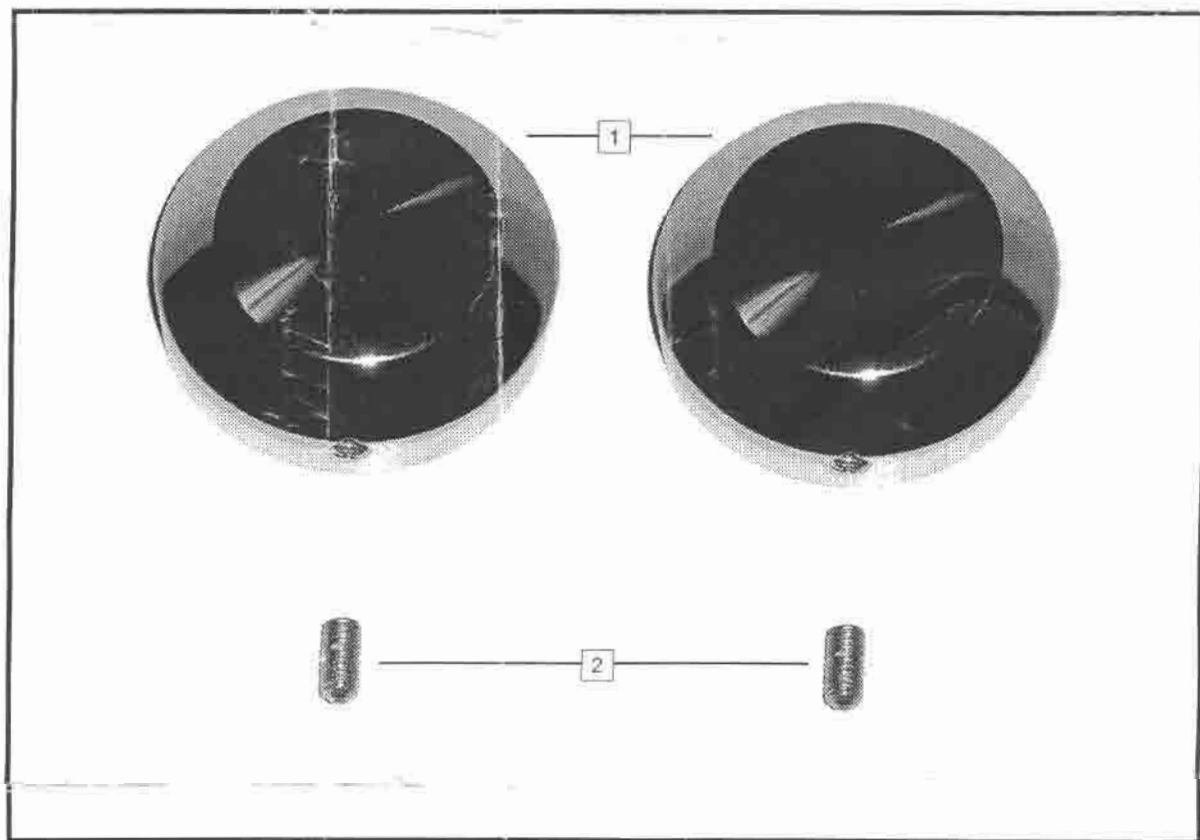


## Tools Required

Ref.	Tools Description
1.	2.5mm Allen Wrench



## Important

### WARNING

Please read this manual and follow its instructions carefully. To emphasize special information, the symbol  and the words **WARNING** and **NOTE** have special meanings. Pay special attention to the messages highlighted by these signal words:

**NOTE:** Indicates special information to make maintenance easier or instructions clear.

## Preparation Prior to Installation

Please read and understand these instructions completely before installation to avoid any possible injury to yourself or damage to the motorcycle and/or accessory.

**NOTE to DEALER:** These instructions contain important information for future reference and must be given to the customer.

## Installation

1. Place one billet fork cap over the bolt head on top of one of the front forks, protruding out of the top triple clamp.
2. Using one supplied M5-0.8x10mm set screw, secure the billet fork cap to the bolt. Tighten the set screw until the cap is fully secure.
3. Repeat steps 1 & 2 for the opposite fork.

### WARNING

Indicates potential hazard that could result in death or injury.