

Fork Air Deflector



Instructions 03-290

Volusia 800


Parts:

- 2 deflectors
- 2 bolts 10 mm
- 6 washers
- 2 rubber washers
- 2 spacers
- 2 nuts
- 2 clamps
- 4 rubber strips
- 2 bolts 1/4 X 20



- 1 Remove the original bolt from the triple tree.
- 2 Insert the spacer in the bolt hole of the triple tree.
- 3 Use the 10mm bolt and the washer (supplied) to hold the deflector on top (see photo).
Note: Do not tighten bolt yet.
- 4 Remove the protective paper from the clamp and install rubber bands on the clamp (may require 2 thicknesses).
- 5 Install the clamp on the fork and attach the deflector as shown below.

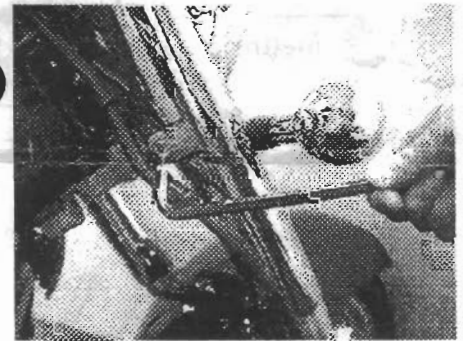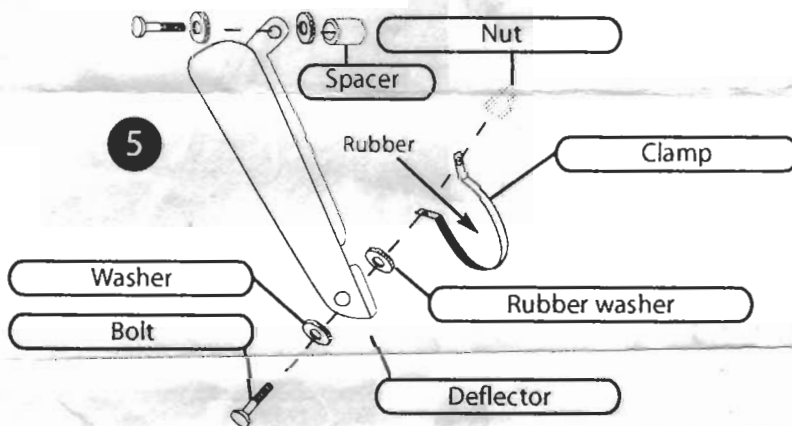

and 2

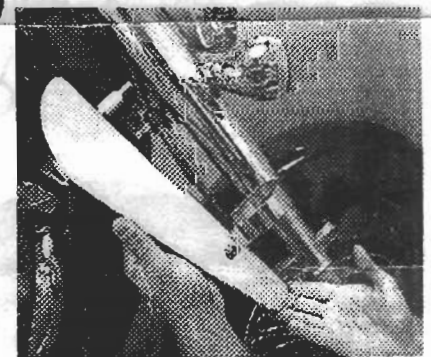

3

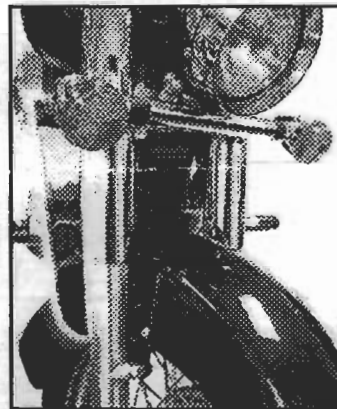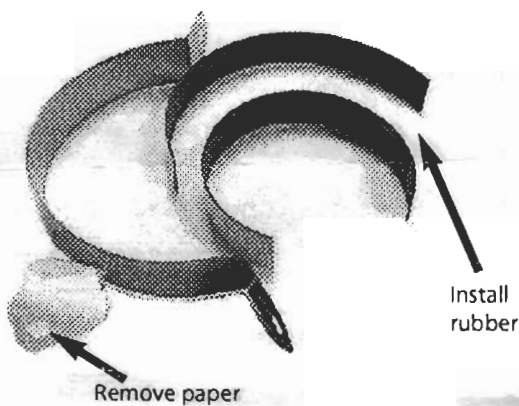

Picture as reference only.

We strongly advise installation by a dealer.
Thank you for choosing Custom World Int'l Products
Happy cruising!