

Helmet Lock Re-Location Bracket

for 1996 & up:

Suzuki: Intruder / Volusia FI 1500
LC and 800

Part # SUZ-01
(Enclosed)


email: bikerbrackets@yahoo.com
919-303-2873

Purchase online!

www.bikerbrackets.com

(Installation instructions inside)

Helmet Lock Re-Location Bracket Suzuki: Intruder / Volusia FI 1500, LC and 800

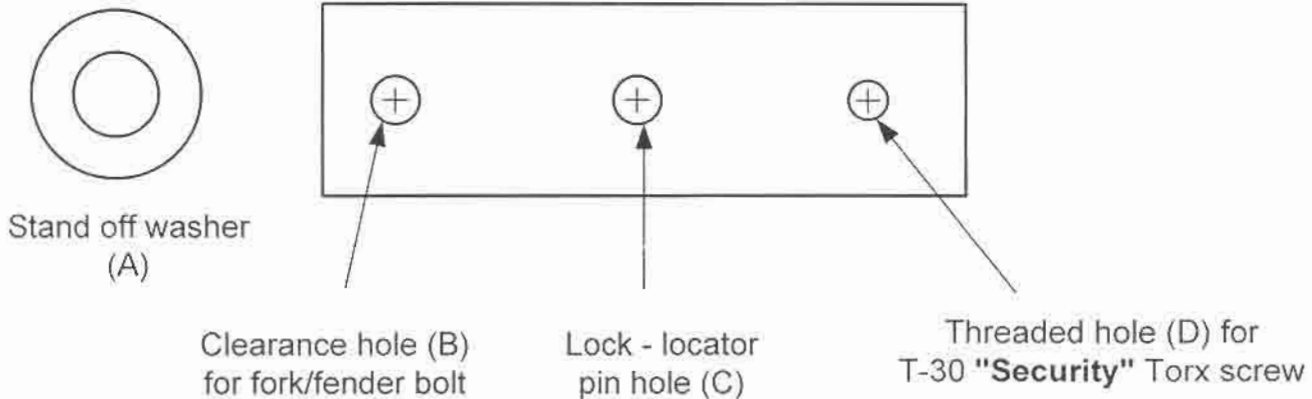

Installation Instructions:

1) Remove the Helmet Lock screw from the rear of the bike using a T-30 "**Security**" torx driver bit.

Note: This bit can be purchased at Ace Hardware for ~\$2.00

2) Remove the forward Fork / Fender bolt (this bracket is designed for the "right side").

3) Put the stand off washer (A) behind the fender over the Fork / Fender bolt hole.

Note: This 3/8" washer is for the ridge created during the fender manufacturing process of the Classic Style bikes. You can get it at the same Ace Hardware as the security bit. It may not be needed on your bike. Verify this for yourself.

4) Locate clearance hole (B) of the bracket, on top of the washer (A)

5) Re-install the fork / fender bolt in it's original hole on the fork, tightened to manufacturers specifications.

6) As you snug the bolt, align the bracket (up or down) where you want it to be.

7) Put the "locator pin" of the lock into hole (C) of the bracket.

8) Put the screw through the Helmet Lock and into hole (D) of the bracket using the original Helmet Lock T-30 "**Security**" torx screw. Tighten this screw to manufacturers specifications.

Caution: Do not over tighten screws or you risk stripping the threads. It is also recommended to use a compound such as Lock Tight when re-installing all screws.

This bracket has been coated gloss black to prevent rusting. Some chipping or scratching may occur during shipping or assembly and can be touched up with gloss black paint. The installer can also have this bracket chrome plated.

Any questions or comments please email: bikerbrackets@yahoo.com

Purchase online!
www.bikerbrackets.com