



# INSTALLATION INSTRUCTIONS

Description: **Touring Backrest w/ Pad**


Part Number: **990A0-75039-TRG**

Applications: **C50/C50T/C90/C90T**

Installation Time: **.20 HRS**


## Contents

Ref.	Part Number	Description	QTY
1.		Touring Backrest w/ Pad	1
2.	990A0-75012-004	M10-1.50x20mm Button Head Bolts	4

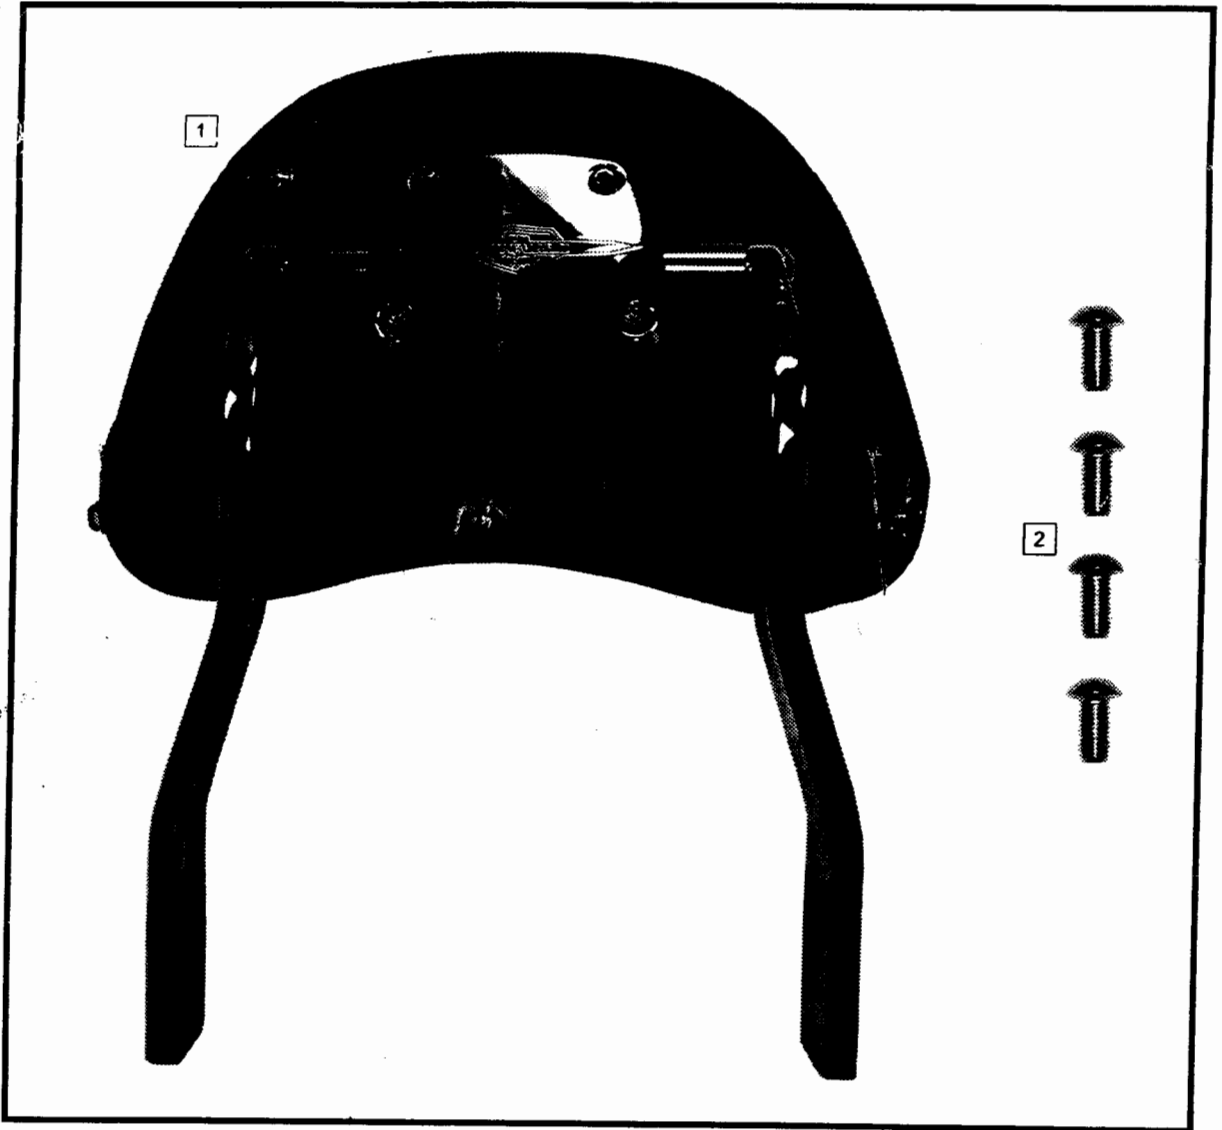

## Tools Required

Ref.	Tools Description
1.	Torque Wrench
2.	6mm Allen Wrench

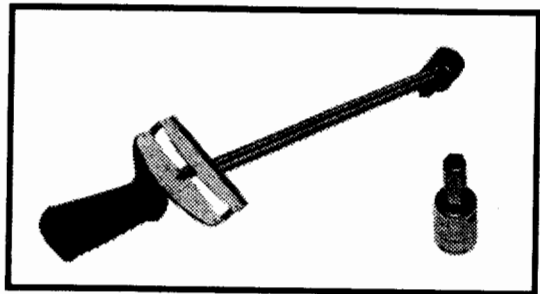



## Important

### ⚠ WARNING

Please read this manual and follow its instructions carefully. To emphasize special information, the symbol ⚠ and the words **WARNING** and **NOTE** have special meanings. Pay special attention to the messages highlighted by these signal words:

**NOTE:** Indicates special information to make maintenance easier or instructions clear.

### ⚠ WARNING

Indicates potential hazard that could result in death or injury.

## Preparation Prior to Installation

Please read and understand these instructions completely before installation to avoid any possible injury to yourself or damage to the motorcycle and/or accessory.

**NOTE to DEALER:** These instructions contain important information for future reference and must be given to the customer.

**NOTE:** Refer to separate installation instructions for mounting bracket sets P/N 990A0-75003, 990A0-75003-TRG, 990A0-75010 or 990A0-75010-TRG

## Installation

1. Install backrest assembly to the inside of the mounting brackets, already installed on the motorcycle, using the supplied M10-1.50x20mm button head bolts.
2. Tighten the M10-1.5x20mm button head bolts to 29 N.m (21 lb-ft).

### ⚠ WARNING

Failure to tighten all bolts to torque specifications may result in injury or death.